


Dodge Charger 2005 – 2010 fuse box diagram

Luggage Compartment Fuse Box

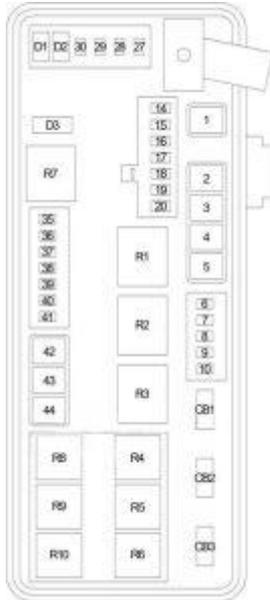

Dodge Charger – fuse box diagram – luggage compartment

No.	A	Protected Component
1	60	Fuse (Luggage Compartment): "14", "36", "38", "44"
2	40	Engine Compartment Fuse Box (Fusible Link 14)
3	20	Police: Dome Lamp
4	40	Engine Compartment Fuse Box (Fusible Link 14)
5	30	except for SRT8: Heated Seat Module, Zener Diode, Fuse (Luggage Compartment): "30"
	40	SRT8: Heated Seat Module, Zener Diode, Fuse (Luggage Compartment): "30"
6	20	Fuel Pump Relay


7	20	SRT8: Subwoofer Amplifier
	15	Police: Spot Lamp (Right)
8	15	Data Link Connector, Occupant Classification System (LHD), Ignition Switch (Engine Control Module (Diesel), Powertrain Control Module, Lock Steering Column Module (RHD), Fuel Pump Relay (Gasoline), Fuse (Luggage Compartment): "27", "29", "40", Diode No.1)
9	20	Power Outlet – Console
10	10	Export: Rear Fog Lamp Relay
	15	Police: Spot Lamp (Left)
14	10	A/C / Heater Control, Sentry Key Remote Entry Module (LHD), Cluster, Intrusion Transceiver Module (RHD)
15	20	Brake Module (Trailer Tow)
16	20	Magnum (300C Touring): Rear Power Outlet
17	20	Cluster, Lock Steering Column Module (RHD), Sentry Key Remote Entry Module (RHD)
18	20	Cigar Lighter
19	10	Stop Lamp Switch, Stop Lamp Inhibit Relay (except MK25E)
20	20	Magnum (300C Touring): Rear Wiper Relay
27	10	Occupant Classification System, Occupant Restraint Controller Module

28	10	except for SRT8: Occupant Restraint Controller Module
	5	SRT8: Occupant Restraint Controller Module
29	5	Stop Lamp Switch, Cluster, Sentry Key Remote Entry Module, Mass Air Flow Sensor (Diesel), ABS, Front Control Module, Powertrain Control Module (Gasoline), Engine Control Module (Diesel)
30	10	Driver/Passenger Door Module, Mirror Switch, Steering Control Module, Police/Taxi Interface Module
35	5	Mirror Switch (except Memory), Passenger Express Window/Door Lock Switch (except Base), Backlite Antenna Amplifier, Headlamp Flasher (Police), Police Relay No.1, Police Relay No.2, Police Relay No.3, Electronic Overhead Module (Export), Rain Sensor (Export)
36	20	Radio, Hands-Free Module, Satellite Receiver, Monitor/DVD Media System, Traffic Information Receiver Module (Export)
37	15	NAG1: Transmission Control Module
38	5	Cargo Lamp (except Magnum), Analog Clock Module, Electronic Overhead Module, Siren (RHD)
39	10	Heated Mirror
40	5	except for SRT8: Left/Right Heated Seat Switch, A/C Heater Control, Inside Rearview Mirror
	10	SRT8: Left/Right Heated Seat Switch, A/C Heater Control, Inside Rearview Mirror
	5	Police: Bank Switch
41	10	A/C Heater Control, Tire Pressure Monitor, Left/Right Headlamp Level Sensor (Export), Parl Assist Module, Headlamp Leveling Module (Export), Left/Right High-Intensity Discharge Lamp (Export)

42	30	Front Blower Motor (MTC), Front Blower Module (ATC)
43	30	Rear Window Defogger
44	20	Front Control Module, Sunroof Motor/Module, Radio Amplifier
Circuit Breaker		
CB1	25	Driver Seat Switch (except Memory), Memory Seat Module, Cluster (except Power/Memory Seat)
CB2	25	Passenger Seat Switch
CB3	25	except for SRT8:Driver/Passenger Window/Door Lock Switch (Base), Driver/Passenger Door Module (except Base), Driver Express Window/Door Lock Switch (except Base)
	30	SRT8:Driver/Passenger Window/Door Lock Switch (Base), Driver/Passenger Door Module (except Base), Driver Express Window/Door Lock Switch (except Base)
Diode		
D1	NAG1: Transmission Control Relay	
D2	Front Control Module	
D3	Zener	
Relay		
R1	Run	

R2	Rear Window Defogger
R3	Accessory Delay
R4	NAG1: Transmission Control
R5	Export: Rear Fog Lamp
R6	Magnum (300C Touring): Rear Wiper
R7	–
R8	Stop Lamp Inhibit (except MK25E)
R9	Fuel Pump
R10	–

Engine Compartment Fuse Box

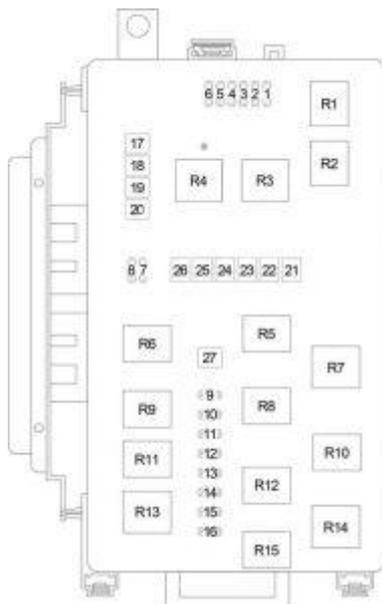

Dodge Charger – fuse box diagram – engine compartment


No.	A	Protected Component
1	20	HID: Left High-Intensity Discharge Lamp
2	20	HID: Right High-Intensity Discharge Lamp
3	15	Adjustable Pedals Relay (except Memory)
4	20	Horn Relay, Front Control Module, Air Conditioner Compressor Clutch (Gasoline)
5	20	HID: Headlamp Washer Relay
	20	Cluster ('05)
	20	Police: Underhood Lamp
6	15	Front Control Module
7	20	Front Fog Lamp, Front Control Module
8	15	Park Lamp Relay (Front Park/Turn Lamp, Front/Rear Side Marker Lamp, License Lamp, Tail/Stop Lamp or Tail/Stop/Park Lamp), Front Control Module
9	15	Front Control Module
10	5	Powertrain Control Module, Starter Relay, Engine Control Module (Diesel)
11	15	SRT8: Powertrain Control Module
	20	except for SRT8: Powertrain Control Module

12	-	-
13	-	-
14	20	SRT8: Powertrain Control Module
	25	except for SRT8: Powertrain Control Module
	20	'05: Powertrain Control Module
	25	Diesel: Engine Control Module, PTC Relay No.1, PTC Relay No.2, PTC Relay No.3
15	25	Gasoline (except SRT8): Fuel Injector, Ignition Coil, Ignition Capacitor, Short Runner Valve Solenoid (3.5L)
	20	'05: Fuel Injector, Ignition Coil, Ignition Capacitor
	20	SRT8: Fuel Injector, Ignition Coil, Ignition Capacitor
	25	Diesel: Engine Control Module, Glow Plug Module, Oxygen Sensor, Intake Swirl Servo Motor, Crankcase Vent Heater, EGR Valve, Boost Pressure Servo Motor, Air Conditioner Compressor Clutch, Fuel Pump Relay,
16	15	Diesel: Engine Control Module
	20	'05: Powertrain Control Module
17	30	ABS
18	30	Wiper On/Off Relay

19	50	Radiator Fan (High) Relay, Radiator Fan Control (High/Low) Relay, Front Control Module
20	20	Starter Relay
21	50	ABS
22	40	Radiator Fan Control Relay, Air Conditioner Compressor Clutch
23	50	HID: High Intensity Discharge Lamp Relay (Fuse (Engine Compartment): "1", "2")
24	60	AWD/SRT/Diesel: Fan Radiator
25	30	Front Control Module
26	20	RLE: Transmission Control Relay
	20	Diesel: Air Conditioner Compressor Clutch Relay
27	30	Front Control Module
Relay		
R1	Horn	
R2	Gasoline: Air Conditioner Compressor Clutch	
R3	Radiator Fan Control (High/Low)	
R4	Radiator Fan (High)	

R5	Wiper On/Off
R6	RLE: Transmission Control
R7	Radiator Fan Control
R8	Wiper High/Low
R9	Starter
R10	Adjustable Pedals (except Memory)
R11	Park Lamp
R12	Front Fog Lamp
R13	Auto Shut Down
R14	High Intensity Discharge Relay
R15	–


Relay Box (Diesel)

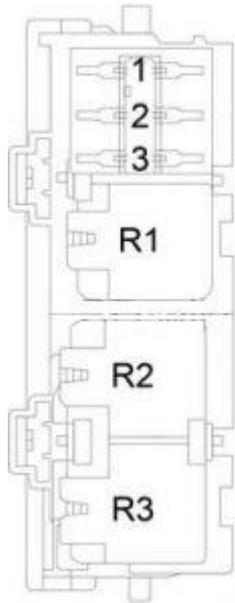

Dodge Charger – fuse box diagram – relay box (diesel)

Nº	A	Protected Component
1	50	PTC No.1 Relay
2	50	PTC No.2 Relay
3	50	PTC No.3 Relay
Relay		
R1	PTC No.3	
R2	PTC No.2	
R3	PTC No.1	

Relay Box (Police)

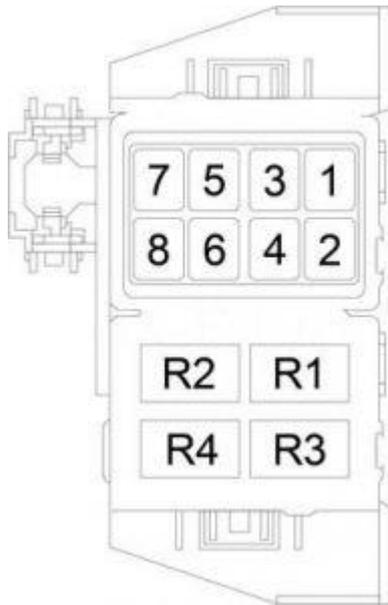

Dodge Charger – fuse box diagram – relay box (police)

Nº	A	Protected Component
1	20	Police Accessories
2	20	Police Relay No.1 (Police Accessories)
3	20	Police Accessories
4	20	Police Relay No.3 (Police Accessories)
5	20	Police Accessories
6	20	Police Relay No.2 (Police Accessories)
7	-	-
8	-	-
Relay		

R1	Police No.1
R2	Police No.3
R3	Police No.2
R4	-